

Assigning the Chime to a Notifier or other receiving system

- 1. Prepare the Notifier/other system by entering registration mode.
- 2. Activate the Chime by pressing the button.
- 3. The Notifier/other system should acknowledge the new device.

Specifications

Operating Frequency	869 MHz / Custom
Dimensions	L94 x W33 x D12.3mm (Adhesive mount) L119 x W33 x D16mm (Screw mount) L98 x W35 x D17mm (Magnetic pattress)
Replaceable Battery	CR 2450 Coin Cell
Battery Life	7 years under the following conditions - 5 alarms transmissions per day.
Auto Low Battery	Battery tested daily
Mounting Options	Screw fixture / Adhesive / Magnetic Pattress
Wireless Range	600m line of sight
Waterproof	IP67 standard
Compliance	CE / RoHS 2 / RED
Warranty	24 months

Battery Replacement


Under normal usage, the battery should last up to 7 years. One CR2450 Coin Cell battery should be used to ensure maximum battery life. It is important that the battery is inserted correctly. Please note the polarity markings.

Packing for shipment

The equipment containing cells or batteries must be packed in strong rigid packaging and must be secured against movement within the outer packaging to prevent accidental activation. The sender's name and return address must be clearly visible on the outer packaging.

Declaration of Conformity:

Hereby, Cair (UK) Ltd declares that the radio equipment type, Cair Chime is in compliance with Directive 2014/53/EU

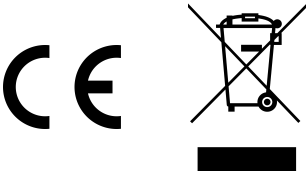

Safety

Do not dismantle or alter the unit. Do not open the case.

Disposal

All electronic waste should be disposed of in accordance with the latest legislation. It must be disposed of within the electrical and electronic waste stream and not be disposed of in the normal waste stream. Recycling electrical waste products help to conserve natural resources and prevent adverse effects on the environment. Contact your supplier should you require more information.



Smart Technology, Made to Care

Chime

Bogus Caller Alarm/Nurse Call/Doorbell



The new Insight range combines modern aesthetic design with high performance and robust demands required by installers.

Cair Chime is a simple and easy to use nurse call button. The compact, wireless design allows it to be positioned in any location with multiple fixing options. This sleek and minimal device can be used as a bogus caller or even a doorbell.



Distributed by: **Sensorium Ltd.**
9 Nethertown Broad Street, Dunfermline Fife KY12 7DS
T: 01383 720600 E: sales@sensorium.co.uk